

RVC-L

Art.-Nr. 10000



- 1) Rokamat RVC-L (22R51180)
- 2) 2014/30/EU, 2006/42/EG, 2012/19/EU, 2011/65/EU, 2001/95/EG, EG No. 1907/2006
- 3) EN 60335-1:2012 + AC:2014 + A11:2014 + A13:2017 + A1:2019 + A2:2019 + A14:2019; EN 60335-2-69:2012
- 4) Kammerer GmbH | An der B 10 | D-75196 Remchingen

Remchingen, 24.02.2022


Beate Kammerer
Head of Technical Documentation

ROKAMAT

Kammerer GmbH
An der B 10
75196 Remchingen
Deutschland




[1]

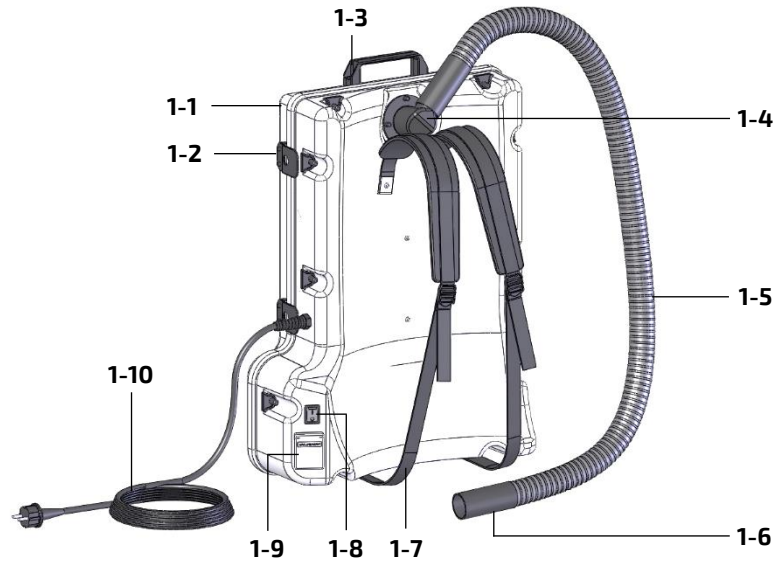


[2]




[3]

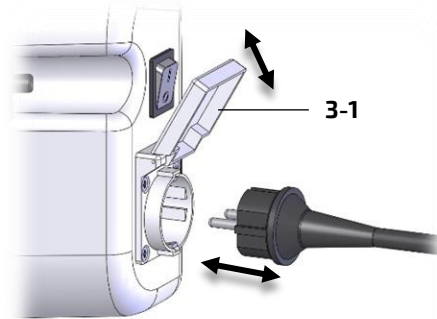


[4]

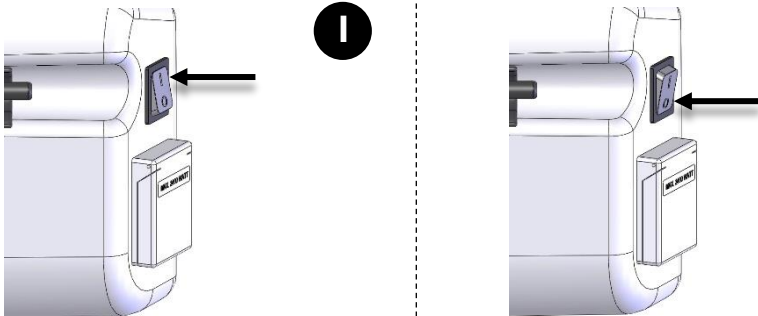


[5]

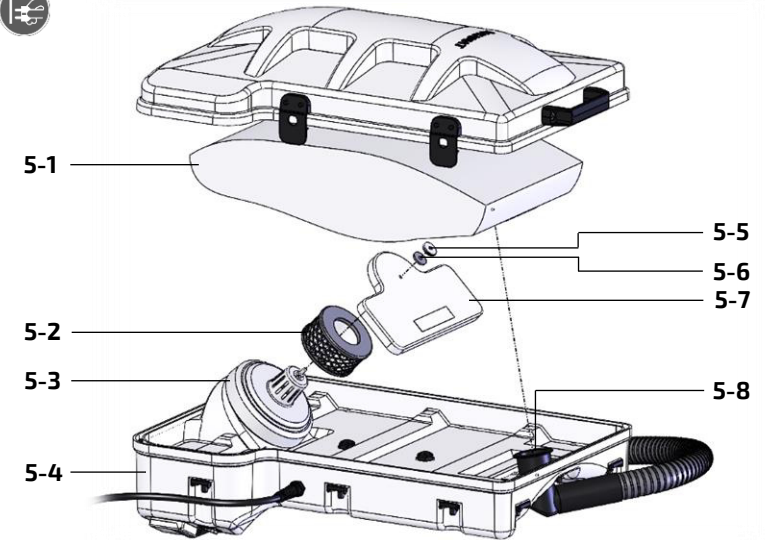

[6]

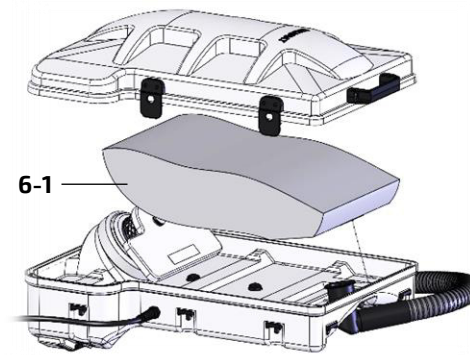

[7]

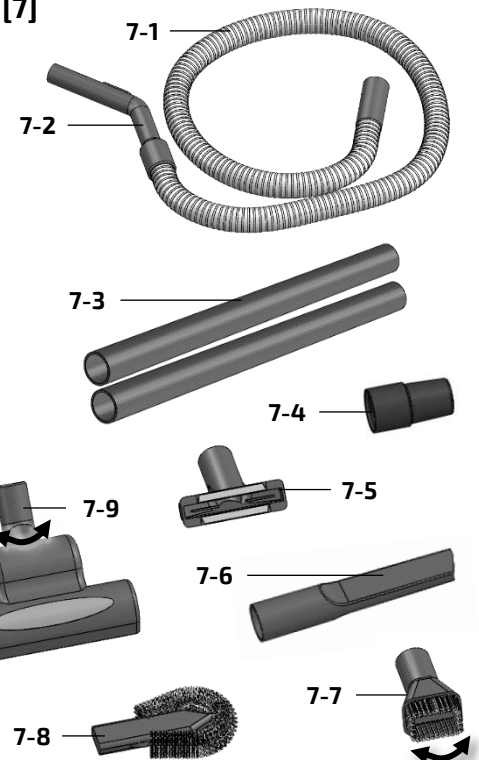

Contents

1. Symbols	3
2. Safety Instructions	3
3. Intended Use	4
4. Technical Specifications	4
5. Device Components	4
6. Commissioning	4
7. Instructions for Use	4
8. Maintenance and Care	5
9. Spare Parts and Accessories	5
10. Environmental Protection	6
11. Declaration of Conformity	6
12. Troubleshooting	6

1. Symbols



For your own protection and for the protection of your power tool, pay attention to all parts of the text that are marked with this symbol!



Risk of electric shock!



Read operating instructions and safety notices! *)



Disconnect from the power supply!



Do not dispose of as domestic waste! *)



Dust class L *)



Warning! The device may contain hazardous dust!



Important advice/information



Safety class I *)



Alternating current *)



Confirms the conformity of the power tool with the directives of the European Community. *)



Confirms the conformity of the power tool with UK legislation. *)

*) These symbols are (also) on the device.

2. Safety Instructions

For your safety



WARNING!

Read all safety warnings and instructions. Failure to follow all safety warnings and instructions may result in electric shock, fire and/or serious injury.



Do not use this power tool before you have thoroughly read and completely understood this Instruction Manual.

Keep all safety instructions and information for future reference. Pass on your power tool only together with these documents.

Please also observe the relevant national industrial safety regulations.

General safety instructions for dry vacuum cleaners:

WARNING! The device is only intended for dry cleaning. Don't use the device outdoors during wet conditions. The device is not suitable for wet cleaning or for extracting wet materials/liquids.

Risk of asphyxiation! Keep the carry case out of reach of children. Children may suffocate or be strangled when playing with the carry case.

Only use the device for its proper use. Consider the local conditions and beware of third parties, in particular children, when working with the device.

The device is not intended for use by persons with restricted physical, sensory or mental abilities or those lacking in experience and/or lacking in knowledge. Only people who have been instructed on how to use the device, or have proven their ability to operate it, and have been explicitly instructed to use it, must use the device. Children must not operate the device. Children must be supervised to prevent them from playing with the appliance.

CAUTION! Safety devices are provided for your own protection. Never modify or bypass safety device.

Use only identical spare parts for maintenance.

Risk of electric shock

WARNING! Never touch the mains plug and socket with wet hands.

Only connect the device to an electrical connection which has been set up by a qualified electrician as per IEC 60364-1.

Only use the electrical outlet module on the device for its stated purpose.

Check that the mains connection cable with mains plug is undamaged each time before using the device.

Do not damage the power supply and extension cable by running over it, crushing or yanking it or similar. Protect the power supply cable from heat, oil and sharp edges.

Ensure sufficient cable clearance. Use only extension cables permitted for outdoor use.

Operation

Risk of explosion! Operation in areas where there is a risk of explosion is prohibited. Never use the suction device near gasoline, gas, varnish, adhesives or other highly explosive substances. Certain substances can form explosive vapors or mixtures with the suction air due to turbulence and corrode the materials in use on the device.

Never use the device to vacuum up toxic, carcinogenic, flammable, or other hazardous materials such as asbestos, arsenic, barium, beryllium, lead, pesticides, or other materials hazardous to health. Observe the safety data sheets of the processed materials.

Do not attempt to vacuum flammable materials, fireworks, burning cigarettes, hot ashes, hot metal shavings, sharp objects such as razor blades, needles, broken glass, or the like.

Never use the device to vacuum up people or animals.

Observe the safety instructions in the operating instructions.

CAUTION! Check the device and the accessories each time before operation, in particular the mains connection and extension cable, to make sure it is safe and working correctly. Pull out the mains. Plug in case of any damage and do not use the device.

Never leave the device unattended when it is not switched off and with the mains plug.

Do not block cooling vents. These vents permit cooling of the motor. Blockage should be carefully avoided otherwise the motor will burn out from lack of ventilation.

Keep proper footing and balance at all times.

Do not fold, tug or step on the hose.

Stop the cleaner immediately if you notice poor performance or anything abnormal during operation.

Check damaged parts. Before further use of the cleaner, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless otherwise indicated elsewhere in this instruction manual. Have defective switches replaced by authorized service center. Don't use the cleaner if switch does not turn it on and off.

Do not operate the cleaner while under the influence of drugs or alcohol.

Use extreme caution when cleaning on stairs.

Do not use the cleaner as a stool or work bench. The device may fall down and may result in personal injury.

Personal protective equipment

CAUTION! Wear suitable gloves when working with the device.

Use a dust mask in dusty work conditions.

As a basic rule of safety, use safety goggles or safety glasses with side shields.

Maintenance

WARNING! Risk of injury, electric shock! Always disconnect the mains plug from the socket before performing maintenance work on the device!

CAUTION! Risk of damage to the device! Do not clean the device with a hose or high-pressure water jet. Do not attempt to clean the exterior or interior with benzene, thinner or cleaning chemicals. Cracks and discoloration may be caused.

Check the plug and the cable regularly and should either become damaged, in order to avoid a hazard, have them replaced by an authorized customer service center.

The fabric filter bag is an optional accessory and only suitable for polystyrene!

Risk of damage to the device! Never insert the lamellar filter when wet.

Device with dust class L

The dusts have occupational exposure limits (OEL) of < 1 mg/m³. The filter material must be tested for this vacuum cleaner. The maximum permeability is

less than 1 %. There are no special disposal regulations.

WARNING! The vacuum cleaner is not approved for dust class M or H. Corresponding materials must therefore not be vacuumed!

Do not operate the device without the complete filtration system. Replace a damaged filter immediately.

Only trained personnel are permitted to use the device and the substances for which it is to be used, including the safe procedure for disposing of the vacuumed material.

An air exchange rate L must be present in the room when the exhaust gas is returned into the room. To remain within the required limit values, the volume flow of returned air must be no greater than 50 % of the fresh air volume (room volume V_R x air exchange rate L_W). Without special ventilation measures, the following applies: $L_W = 1h^{-1}$.

Please also observe the relevant national industrial regulations.

This device contains dust that is harmful to your health. Emptying and maintenance, including removal of the dust bag, may only be performed by technical specialists wearing suitable personal protective equipment. Observe the applicable safety instructions for the materials being handled.

For servicing performed by the user, the device must be disassembled, cleaned and maintained only to the degree that this is possible without presenting a danger to the maintenance personnel and other persons. Suitable precautionary measures include detoxification before disassembly. Make provisions for local forced ventilation at the location where the device is to be disassembled, for cleaning the maintenance surface and to ensure adequate protection for the personnel.

All contaminated objects resulting from maintenance and repair work that cannot be satisfactorily cleaned must be correctly disposed of. Such objects must be disposed of in sealed bags in accordance with the applicable regulations for the disposal of this type of waste.

Emission levels

NOTE! Values for the A-weighted sound pressure level and for the total vibration values can be found in the "Technical specifications" table in chapter 4.

The vibration emission level given in this information sheet has been measured in accordance with a standardized test and may be used to

compare one tool with another. It may be used for a preliminary assessment of exposure.

3. Intended Use

The **RVC-L** rucksack vacuum cleaner is intended for vacuuming dry and non-flammable dusts indoors and outdoors. It is suitable for the collection of dust of dust class L, which is harmful to health. This device is suitable for commercial use, e. g. in construction sites, hotels, schools, hospitals, factories, stores and offices. The additional appliance socket-outlet on the vacuum cleaner is intended for connecting a power tool. The **RVC-L** is suitable both as a vacuum cleaner for sucking up dust and as a dust extractor in combination with a dust generating machine. The usage height of the backpack vacuum cleaner is limited to 2,000 m.

Only sufficiently qualified and trained personnel is allowed to work with the vacuum cleaner. The intended use includes the observance of the operating instructions, in particular the safety instructions and the observance of generally recognized accident prevention regulations.

4. Technical Specifications

Rucksack vacuum cleaner RVC-L Item No. 10000/10000-CH	
Rated voltage	230 V AC
Frequency	50 Hz
Power	1100 W
Negative pressure	190 hPa
Air flow	216 m ³ /h
Max. power at the socket	2400 W
Filter bag capacity	15 l
Total weight	7,0 kg
Dimension compact (LxHxW)	630x430x200 mm
Cable length	3,7 m
Dust class	L
Safety class	I / 
A-weighted sound pressure level (see cap. 2 "Emission levels"):	
Sound pressure level L_{pA}	75 dB(A)
Sound power level L_{WA}	78 dB(A)
Uncertainty K_{pA} , K_{WA}	2,5 dB

Total vibration value (see cap. 2 "Emission levels"):

Emission value a_h	<2,5 m/s ²
Uncertainty K	1,5 m/s ²

5. Device Components

The specified illustrations can be found in fig. [1] on page 2 of the operating instructions.

- 1-1 Upper part
- 1-2 Clamp
- 1-3 Handle
- 1-4 Flange with elbow fitting
- 1-5 Suction hose
- 1-6 Socket pipe
- 1-7 Belt
- 1-8 Switch
- 1-9 Socket-outlet
- 1-10 Mains cable

6. Commissioning



WARNING!

**Unauthorized voltage or frequency!
Risk of accident!**

The mains voltage and the frequency of the power source must correspond with the specifications on the device's name plate.

Only connect the tool to a grounded power supply.



CAUTION!

Before switching on the power tool: Unpack rucksack vacuum cleaner and accessories and check that no parts are missing or damaged.

Always use the vacuum cleaner with the filters (lamellar filter and filter bag) properly installed! Do not use a damaged filter bag. Otherwise the vacuumed dust or particles may be exhausted from the cleaner and they may cause respiratory disease to the operator.

Adjusting the shoulder belt [2]

Put the device on its back and then adjust it to the body by pulling on the centre straps. Do not put on too tight.

Switching the device on and off [4]

Switching on: Set switch [1-3] to position I.

Switching off: Set switch [1-3] to position 0.

7. Instructions for Use



WARNING!

Risk of injury, electric shock!

Always pull the mains plug out of the socket before performing any type of work on the device!



CAUTION!

Risk of damage to the device!

Do not place the device on the floor during operation! Only carry it on your back.



CAUTION!

Danger due to technical defect!

Switch off the motor immediately if the vacuuming performance decreases.

Connecting the tool

Push the socket pipe [1-6] onto the intake socket of the corresponding tool. Check for correct fit!



ADVICE!

The socket pipe is suitable for Ø40mm intake sockets. For smaller diameters, use the appropriate adapter [7-4].

Using the socket on the vacuum cleaner [3]



WARNING!

Risk of damage to the device!

As soon as the switch of the vacuum cleaner is actuated, voltage is also present at the socket! **Limited power output! Risk of accident!** The socket is designed for a maximum power of 2400 watts!

Fold up the cover of the socket [3-1] and insert the power plug of the corresponding tool.

Using as a cleaner [7]

If you want to use this product as a cleaner, follow the below procedures.

Suction hose 2.0 m [7-1]

Replace the suction hose [1-5] with the suction hose 2.0 m [7-1].

Socket [7-2]

The suction flow can be regulated on the handpiece by opening the slider.

Completely open = min. suction flow

Completely closed = max. suction flow

Tubes [7-3]

If necessary, for extension, insert the two tubes [7-3] into each other by turning them simultaneously and then push them onto the handpiece [7-2] by turning them simultaneously.

Adapter [7-4]

If suction hoses with a smaller diameter are used, push the adapter [7-4] onto the handpiece [7-2] or the tube [7-3] by simultaneously turning it.

Upholstery tool [7-5]

To clean textiles, push the upholstery tool [7-5] onto the handpiece [7-2] or the tube [7-3] by simultaneously turning it.

Crevice tool [7-6]

To clean joints or crevices, push the crevice tool [7-6] onto the handpiece [7-2] or the tube [7-3] by simultaneously turning it.

Dusting brush [7-7]

To clean sensitive surfaces such as furniture or fittings in the car, push the suction brush onto the handpiece [7-2] or the tube [7-3]. The brush head can be rotated 360°.

Radiator brush/crevice brush [7-8]

To clean radiators or other robust and hard-to-reach objects, push the radiator brush [7-8] onto the already pre-mounted crevice nozzle [7-6].

Turbo brush [7-9]

To clean textile wall and floor coverings and upholstery, push the turbo brush [7-9] onto the handpiece [7-2] or the tube [7-3] by simultaneously turning it. The suction head is movable.

Suction nozzle [7-10]

For cleaning large surfaces, push the suction nozzle [7-9] onto the handpiece [7-2] or the tube [7-3] by simultaneously turning it. Depending on the

surface, operate the toggle lever. The suction head is movable.

Floor upholstery nozzle [7-11]

For cleaning large areas of upholstered floors, push the floor upholstery nozzle [7-11] onto the handpiece [7-2] or the tube [7-3] by simultaneously turning it. The floor upholstery nozzle can be additionally fixed by the screw connection at the upper end. The suction head is movable.

Handle [1]

Always use the handle [1-3] to transport the suction unit main part.

8. Maintenance and Care

WARNING!
Risk of injury, electric shock!

Always disconnect the mains plug from the socket before performing maintenance work on the device!

CAUTION!
Risk of damage to the device!

Do not clean the device with a hose or high-pressure water jet.
Never use gasoline, benzine, thinner, alcohol or the like. Discoloration, deformation or cracks may result.

Check all wearing parts once a month.

- Repairs may be carried out by an authorized customer service center only.
- Repairs to electrical tools must be carried out by qualified electricians only!
- Pay attention to the safety inspection for mobile devices for industrial use in accordance with the locally applicable regulations.

Check the plug and the cable regularly and should either become damaged, in order to avoid a hazard, have them replaced by an authorized customer service center.

Clean the device, accessories and mains cable after use with clean with a damp cloth.

During the warranty period do not loosen the screws on the housing. Non-compliance will deem the guarantee obligations of the manufacturer null and void.

At least once a year, the manufacturer or an instructed person must perform a technical inspection including filters, air tightness of the vacuum cleaner, and control mechanisms.

Paper filter bags [5]

ADVICE!

When the paper filter bag [5-1] is already full, replace with *new* one. Continuous use with the paper filter bag full results in reduced suction power.

Replacement

- Remove the upper part [1-1] by lifting the clamps [1-2].
- Pull off the paper filter bag [5-1] from the flange [5-8] at the reinforced point.
- Fit a new paper filter bag [5-1] onto the flange [5-8]. Check for correct fit/tightness!
- Replace the upper part [1-1] and engage the clamps [1-2]. Make sure that the paper filter bag [5-1] is not jammed anywhere.

Fabric filter bag [6]

WARNING!
Risk of damage to the device!

The *fabric filter bag* is an *optional* accessory and *only suitable for polystyrene!*

ADVICE!

When the paper fabric filter bag [6-1] is already full, replace with *new* one. Continuous use with the paper filter bag full results in reduced suction power.

Emptying

The fabric filter bag is equipped with a **zipper**. When this is opened, the contents can be emptied. Then close the zipper again.

Replacement

- Remove the upper part [1-1] by lifting the clamps [1-2].
- Pull the fabric filter bag [6-1] off the flange [5-8] at the fabric filter attachment in the direction of the handle.
- Push on new fabric filter bag [6-1] parallel to the flange [5-8]. Check correct fit/tightness!

- Replace the upper part [1-1] and engage the clamps [1-2]. Make sure that the fabric filter bag [6-1] is not jammed anywhere.

Lamellar filter [5]

CAUTION!
Risk of damage to the device!

Never insert the lamellar filter when wet.

ADVICE!

To keep optimum suction power and clean exhaust, clean the lamellar filter [5-2] periodically. If enough suction power is not obtained even after the cleaning, replace the filter with new one.

Cleaning

If necessary, remove the lamellar filter (see "Replacement"), clean it under running water and dry.

Replacement

- Remove the upper part [1-1].
- Loosen the knurled nut [5-5] and remove it together with the rubber washer [5-6] and the covering for lamellar filter [5-7].
- Remove the lamellar filter [5-2] from the motor cap [5-3].

Insert the new lamellar filter in reverse order.

Remove dust from the motor regularly

It is possible that particles deposit inside the device during operation. This impairs the cooling of the device. Conductive build-up can impair the protective insulation of the power tool and cause electrical hazards.

The vacuum unit should be cleaned regularly, often and thoroughly through all of the motor hood [5-3] and the vacuum cleaner base [5-4] using a vacuum cleaner or by blowing in dry air. Prior to this operation, separate the power tool from the power source and wear protective glasses and dust mask.

Environmental conditions**Operation**

Temperature range: +5° C to +50° C
Humidity: ≤ 85 %, non-condensing
Climate: dry

Transport and storage

Temperature range: -5° C to +55° C
Humidity: 0 % to 70 %
Climate: dry, roofed, dew protected

9. Spare Parts and Accessories

Accessories can be found in the manufacturer's catalogues. Exploded drawings and spare-part lists can be found on our homepage: www.roka-mat.com.

Use only original ROKAMAT spare parts and accessories!

10. Environmental Protection

The vacuumed dust may contain harmful substances. Dispose appropriately.

Observe national regulations on environmentally compatible disposal and on the recycling of disused machines, packaging and accessories.



For Great Britain and EU countries: Do not dispose of electric equipment or battery pack together with household waste material! In observance of the European Directives, on Waste Electric and Electronic Equipment and Batteries and Accumulators and Waste Batteries and Accumulators and their implementation in accordance with national laws, electric equipment and batteries and battery pack(s) that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility.



ADVICE!

Please ask your dealer about disposal options!

11. Declaration of Conformity

It is expressly declared that the rucksack vacuum cleaner and dust extractor listed on the first page under 1) from the serial number indicated onwards complies with all relevant provisions of the directives or regulations listed in 2) and that the harmonized standards listed in 3) have been applied. The technical documentation is available from the authorized documentation agent named in 4).

12. Troubleshooting

Problem	Possible causes	Remedy
The motor thermo-protector has triggered. Motor switches off due to overheating.	Paper filter bag/fabric filter bag* full.	Replace paper filter bag or empty fabric filter bag*. Allow the device to cool down.
	Lamellar filter blocked.	Clean or replace lamellar filter. Allow the unit to cool down.
No, insufficient or decreasing extraction power.	Suction tube, suction hose or suction nozzle blocked.	Remove blockages from suction tube, suction hose or suction nozzle.
	Suction hose kinked.	Remove kinks.
	Suction hose defective.	Replace defective suction hose.
	Speed at the connected tool too high.	Reduce speed at connected tool.
	Paper filter bag/fabric filter bag* full.	Replace paper filter bag or empty fabric filter bag*.
	Lamellar filter blocked.	Clean or replace lamellar filter.
	Upper part opened.	Close upper part correctly.
Motor power fluctuates.	Carbon brushes worn.	Replace carbon brushes.
RVC-L not working.	No power supply.	Supply the power to the tool and the cleaner.
	Cable break.	Replace mains plug.
Dust leakage during vacuuming.	The restart protection is active.	Switch the vacuum cleaner off and on again.
	Paper filter bag or fabric filter bag* defective.	Replace defective paper filter bag or fabric filter bag*.
	Paper filter bag/fabric filter bag* inserted incorrectly.	Check the fit of the paper filter bag/fabric filter bag*.
	Upper part opened.	Close the upper part correctly.

* Special accessories

If problems other than those listed occur, please contact your ROKAMAT service workshop or your local specialist dealer.